Multifunction

INFRARED THERMOMETER

Non-Contact

Model: AT-B8866

Version 1. 0

User`s Manual

Contents

1.In this box 1

2.Features 1

3.Technical parameter 3

4.Illustration 4

5.Function definition of icons 5

6.Function definition of buttons 6

7.Setting 7

8.Measurements

8.1 Body temperature 8

8.2 Object temperature 9

8.3 Exceeding measurement range 10

9. Battery replacement 11

10. Maintenance&tips 11

11. Trouble shooting 12

1. In this Box

The box should have contained:

1× Thermometer

2 × AA battery

1× User's manual

2. Features

- Uses reliable sensor made in German;
- All-new & patented probe design ensures high accuracy;
- Excellent adaption to ambient temperature.
- Accurate and reliable even under complicated surrounding;
- Body mode and object mode available. One switch to change mode.
- Beeper for fever or high temperature (alarm value can be defined by user;)
- Automatic recall of last reading.
- Large LCD with back-lit;
  C/F reading available;
- Automatic shut off.

3. Technical parameters

Measurement method	Non-contact	
Effective distance	5cm～8cm	
Range	Body	35. 5℃～42. 9℃ （85.9℉～109.2℉）
	Object	0℃～118℃ （32℉～244℉）
Accuracy	Body	±0. 2℃/ 0. 4℉
	Object	±1. 0℃/1. 8℉
Resolution	0.1℃/℉	
Working condition	10℃～40℃（50℉ ～104℉） RH≤80%Non-condensing	
Storage condition	-25℃～55℃ (-13℉～131℉) RH≤90％Non-condensing	
Power supply	d.c. 3V 2 AA alkaline Battery	
Power consumption	When off≤10uW	
	When measurement≤30mW	
Power level indicator	Indication for low power level	
Memory	Automatic recall of last reading	
Display	LCD back-lit display	
Reading scale	Celsius or Fahrenheit	
Automatic shut off	In 30 seconds	
Dimensions	93mm×153mm×41mm	
Net weight	125g	
Standards	EN60601-1、EN 12470-5 、 ASTM 1965-98	

4. Illustration

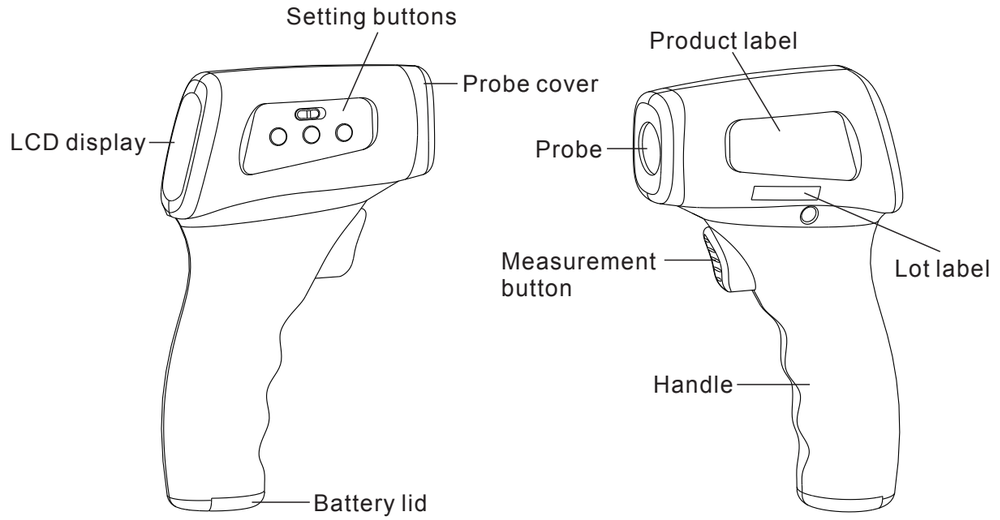

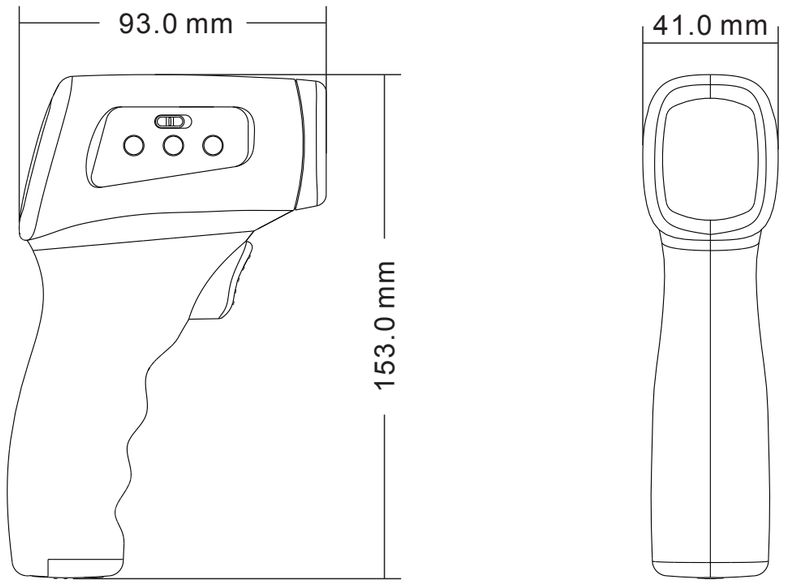

5. Function definition of icons

Function definition	Icon	Details	
Battery level		When it is visible	The battery is in low lever, but the thermometer is functional properly. Please replace battery asap
		When it flashes	The battery is exhausted and ther -mometer can not function properly. Please replace battery immediately
		When it is invisible	Battery power is sufficient
Beeper		When it is visible	Beeper is on
		When it is invisible	Beeper is off
Measurement mode	**Body temp**	Body mode	
	Object temp	Object mode	
Reading scale	°C	Celsius reading	
	°F	Fahrenheit reading	
Reading display		Temperature value	
Memory	M	Temperature value of last measurement	

6. Function definition of buttons

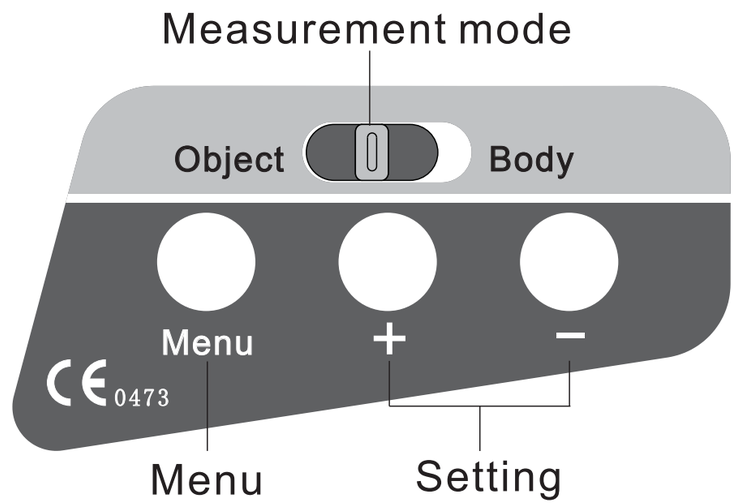

Buttons	Description
Body/object	To switch measurement mode between human body and object
Menu	Activates menu and save setting
+	Increases parameter or select relevant parameter when setting parameter
−	Reduces parameter or select relevant parameter when setting parameter

7. Setting

User can change reading scale between Celsius or Fahrenheit,switch on or switch off beeper, set alarm value, set deviation value and change measurement mode between human body or object.Please refer to below chart.

Menu	Function	″－″	″＋″	Default	Remarks
F-1	Reading scale setting	℃	°F	℃	
F-2	Beeper on/off	Off	On	Off	
F-3	Alarm value setting	Decrease 0.1℃	Increase 0.1℃	38℃	Effective range: 37℃～42℃
F-4	Deviation value setting	Decrease 0.1℃	Increase 0.1℃	0.8℃	Effective range: 0℃～3℃
SAVE	Save and automatic shut off				

⚠Notice:

1.Temperature under human body mode is obtained from dynamic compensation of environmental temp and forehead surface temp.

2. Object temperature mode is to test surface temperature of an object. The temperature get from forehead under this mode is merely temperature of forehead surface but not body temperature.

3. Deviation setting is able to adjust measurement value from 0℃ to 3.0℃ according to testing distance, surrounding temperature, skin difference, etc. Defaulted value is 0.8°C.

For example: if the tested body temp is 36.2℃ while the temp is supposed to be 37.0℃, 'F-4' to set up the value and adjust to 1.6℃, then the measurement value will be 37.0℃.

8. Measurement

8. 1 Body temperature

- Press measurement button to turn on thermometer and it displays boot screen (fig.8.1). After POST and two beeps, it will display value of last reading and be ready for measurement (fig.8.2).
- Make sure the thermometer is under body mode.
- Keep distance at 5cm to 8cm from upper eyebrows to the probe (fig.8.3). Press measurement button and when it gives a “beep” measurement is finished and value will be displayed (fig.8.4). If measurement value is exceeding alarm value (Defaulted value is 38℃) ,it gives “beep. beep. beep” as a indication.
- After measurement, if the thermometer is idle in 30 seconds, it will display “OFF” (fig.8.5) and gives a “beep” and shut off automatically.

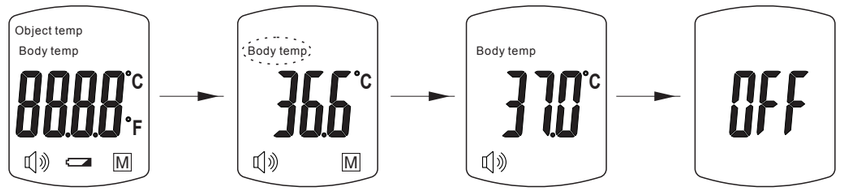

（fig8. 1） （fig8. 2） （fig8. 4） （fig8. 5）

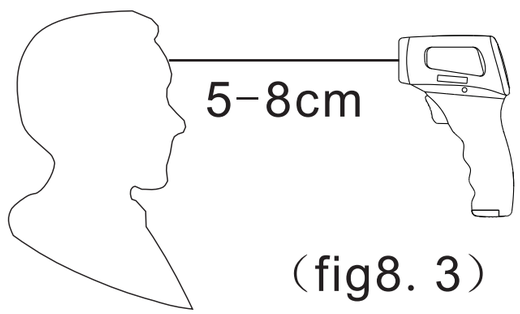

（fig8. 3）

⚠Notice:

1.Keep the sensor and probe cavity clean before and after use.
2.To ensure the accuracy of measurement, it is recommended to start measurement after ten minutes when carrying the thermometer to a new environment.
3.Wait for 10 minutes to measure body temperature after measuring extremely high temperature or extremely low temperature objects.
4. Wait for 5 minutes to start a measurement when a measuring target (object or human) is from an environment with enormous difference in temperature.
5. Breeze, water, sweating, cosmetic on forehead may affect measurement. Do not measure body temperature in 30 minutes after exercise, bath or meals.

8.2 Object temperature

- Press measurement button to turn on thermometer (fig.8.6).
- Make sure the thermometer is under object mode. (fig.8.7).
- Keep vertical distance at 5cm to 8cm from object to measu -rement probe. Press measurement button and when it gives a “beep” measurement is finished and value will be displayed After measurement, if the thermometer is idle in 30 seconds,
- it will display “OFF” (fig.8.8) and gives a “beep” and shut off automatically.

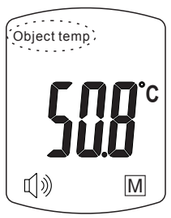

（fig9. 6）

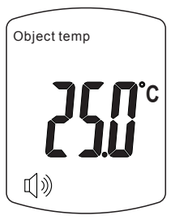

（fig9. 7）

（fig9. 8）

⚠Notice:

1.The value under this mode is object surface temperature instead of core temperature.
2.The defaulted infrared emissivity is 0.95. The reading will be deviated from the real temperature according to different emissivity. For example, the reading on stainless steel will be obviously lower than real temperature. BE CAUTIOUS FOR SCALDING.

8.3 Exceeding measurement range

Body mode:
When measurement value is lower than 35.5ºC, it displays Lo (fig. 8.9) and gives “beep.beep.beep.beep”.
When measurement value is higher than 42.0 ºC, it displays Hi (fig. 8.10) and gives “beep.beep.beep.beep”.
Object mode:
When measurement value is lower than 0ºC, it displays Lo (fig. 8.11) and gives “beep.beep.beep.beep”.
When measurement value is higher than 118.0 ºC, it displays Hi (fig.8.12) and gives “beep.beep.beep.beep”.

⚠Notice:

When surrounding temperature is lower than 10.0ºC or higher than 40.0ºC, it displays Err. It's not allowed to measure or accuracy is not assured.

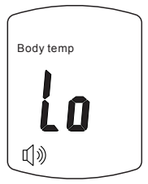

（fig8. 9）

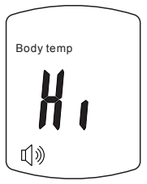

（fig8. 10）

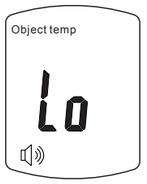

（fig8. 11）

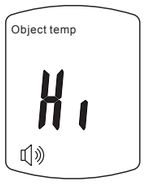

（fig8. 12）

（fig8. 13）

9. Battery replacement

- Open the battery lid and take out exhausted battery.
- Put into 2 AA alkaline batteries and close up battery lid. After new battery is installed, thermometer will give“Beep.Beep”. If there's no beeps, check if the positive and negative pole is correct (see fig.9.1).

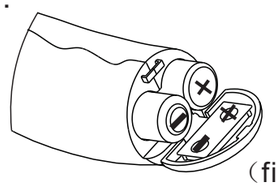

（fig9. 1）

⚠Notice:

1.Take out battery in case the thermometer is not used for long period. Don't put the battery to fire.

2. Dispose battery according to local regulations.

10. Maintenance & tips

- Make sure the sensor and probe cavity is clean otherwise it will affect accuracy. Cleaning method for probe:

  1.Use the cotton stick or soft cloth with water or alcohol to wipe the casing.

  2.Use the cotton stick or soft cloth with alcohol to wipe the sensor surface or probe cavity gently. Don't use thermometer before alcohol is vaporized.
- Read this manual book thoroughly before use. Make sure battery is well installed.
- It is not allowed to put the thermometer in any liquid or expose to strong sunlight or extremely low temperature.
- Strong crash or hit to the product will cause its damage.
- Do not dismantle this thermometer by yourself.
- Keep the thermometer from children's reach.

- Do not use the thermometer under circumstance of strong electromagnetic interfere.
- The measurement results are probably fluctuating due to improper measurement ways. Please practice adequate measurements in order to improve your skill.

  The measurement results can not supersede a doctor's diagnosis.
- Special maintenance is unnecessary for this thermometer. Please
- contact distributor or manufacturer in case of malfunction.

11. Trouble shooting

Description	Solutions
LCD display “LO”or“HI”	1.Breeze, water, sweating, cosmetic on forehead may affect measurement. 2.Check deviation value setting. Defaulted value is 0.8°C。 3.While if the testing environmental temp changes so enormously or if the thermometer is used directly from high -temp object to very low-temp one, the measurement difference will happen. The thermometer should be kept in a relative stable environment for 10 minutes to get heat balance before starting a new measurement. 4.Ensure measurement distance is 5cm to 8cm.
No response when pressing measurement button	1.Take out and reassemble battery. 2. Check if the thermometer is under menu setup. In procedure of menu setting, thermometer is unable to measure and therefore no response.
No display or improper display	1.Take out battery and install battery again.
No beeper	1.Check if the beeper is switched off.
Shut off right after switching on	1.Check battery level or take out and install the battery again.